


ABSORPTION COEFFICIENTS

CALME

Statistical absorption coefficients according to ISO 354 standard:

- 0 + 50: only 50 mm air cavity
- 0 + 100: only 100 mm air cavity

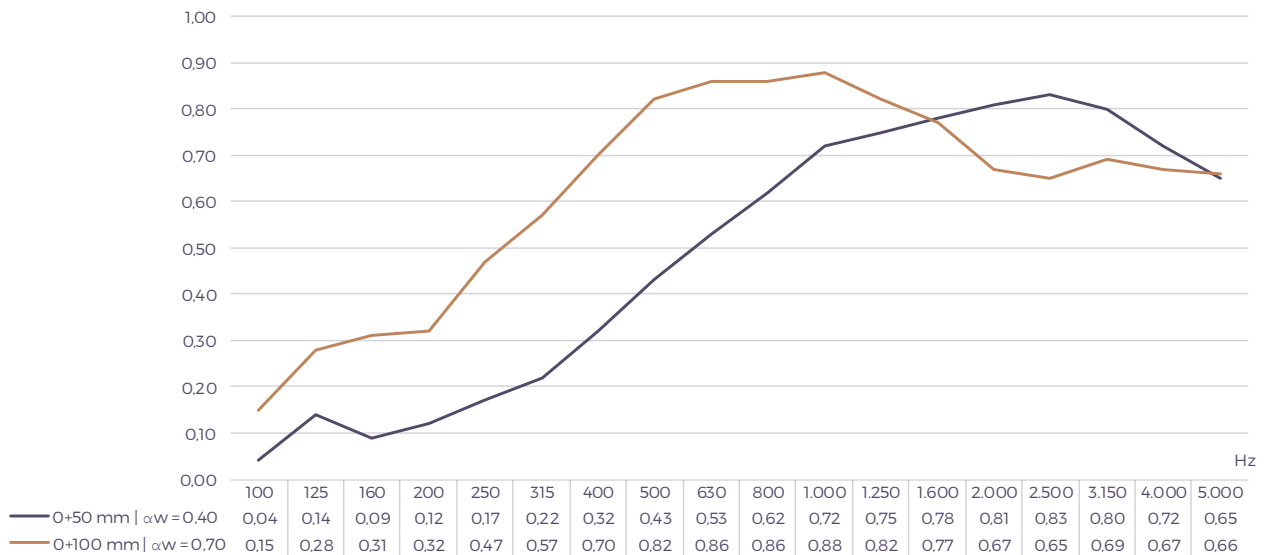

- 50 + 0: only 50 mm rockwool
- 50 + 50: 50 mm rockwool and 50 mm air cavity

